

Capacitive level detection
of bulk solids

VEGACAP 62
VEGACAP 65
VEGACAP 66



Product Information

VEGA

Contents

1 Description of the measuring principle.	3
2 Type overview.	5
3 Mounting information	6
4 Electrical connection	
4.1 Preparing the connection	9
4.2 Wiring plans	9
5 Adjustment	
5.1 Adjustment, general	11
6 Technical data.	12
7 Dimensions	16
8 Product code.	17

Take note of safety instructions for Ex applications



With Ex applications, please note the Ex-specific safety information on our homepage www.vega.com/services/downloads and in the documentation that comes with every instrument. In hazardous areas you should take note of the appropriate regulations, conformity and type approval certificates of the sensors and power supply units. The sensors must only be operated on intrinsically safe circuits. The permissible electrical values are stated in the certificate.

1 Description of the measuring principle

Measuring principle

The VEGACAP series consists of capacitive sensors for level detection.

The instruments are designed for industrial use in all areas of process technology and are universally applicable.

The probe, the measured product and the vessel wall form an electrical capacitor. The capacitance is influenced by three main factors.

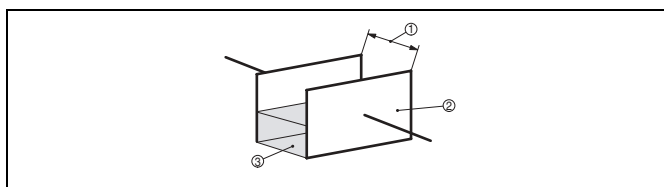


Fig. 1: Functional principle - Plate capacitor

- 1 Distance between the electrode surfaces
- 2 Size of the electrode surfaces
- 3 Type of dielectric between the electrodes

The probe and the vessel wall are the capacitor plates. The measured product is the dielectric. Due to the higher dielectric constant (DK value) of the product compared to air, the capacitance increases as the probe is gradually covered.

A level change causes a change in capacitance which is processed by the electronics and converted into an appropriate switching command.

The more constant the conductivity, bulk density and temperature of a product, the better the conditions for capacitive measurement. Changes in the measuring conditions are generally less critical when detecting materials with high DK values.

The sensors are maintenance-free and rugged and can be implemented in all areas of industrial measurement engineering.

Whereas fully insulated versions are predominantly used for liquids, partly insulated versions are preferred for solids.

Implementation in very adhesive or corrosive products is also no problem. Since the capacitive measuring principle places no special requirements on mounting, a host of different applications can be equipped with VEGACAP series 60 level switches.

1.1 Application examples

Light-weight solids

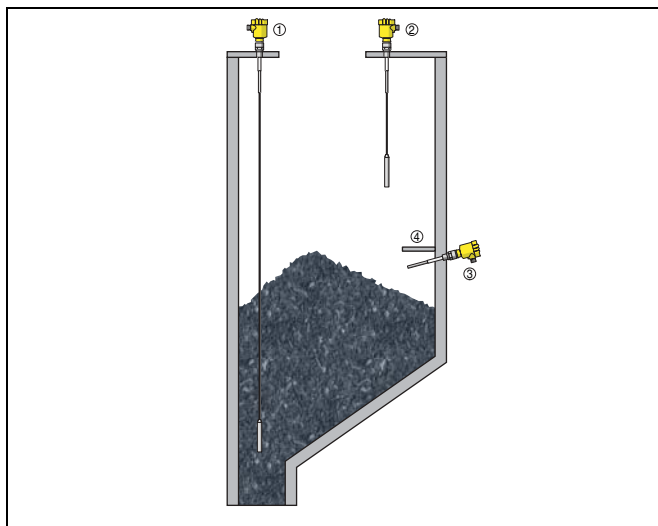


Fig. 2: Level switches in light solids

- 1 VEGACAP 65 level switch for empty signalling
- 2 VEGACAP 65 level switch for full signalling/overflow protection
- 3 VEGACAP 62 level switch for level detection - laterally mounted
- 4 Protective cover above the probe

Cable probes should generally be preferred over rod probes for use in bulk solids. Cable probes can follow the movements of the bulk material and thus have a considerably longer service life in abrasive and highly agitated bulk solids. The switching point is usually on the gravity weight, which provides very high measuring sensitivity due to its larger surface. This is especially advantageous for products with small DK value.

If the level detector has to be mounted laterally, a VEGACAP 65 cable probe or a VEGACAP 62 rod probe can be used. Due to the lateral mounting, VEGACAP 62 yields very high switching accuracy even if the product characteristics are constantly changing. The instrument should be mounted slightly inclined (approx. 20 ... 30°) to avoid possible buildup. Depending on the vessel height and position of the filling stream, VEGACAP 62 should be protected from mechanical impact with a protective cover.

If there is heavy condensation on the vessel ceiling, and thus on the measuring probe, a protective tube approx. 300 mm long should be applied.

Advantages:

- Shortenable probes
- Insensitive to buildup
- Easy setup
- Rugged construction

Heavy solids

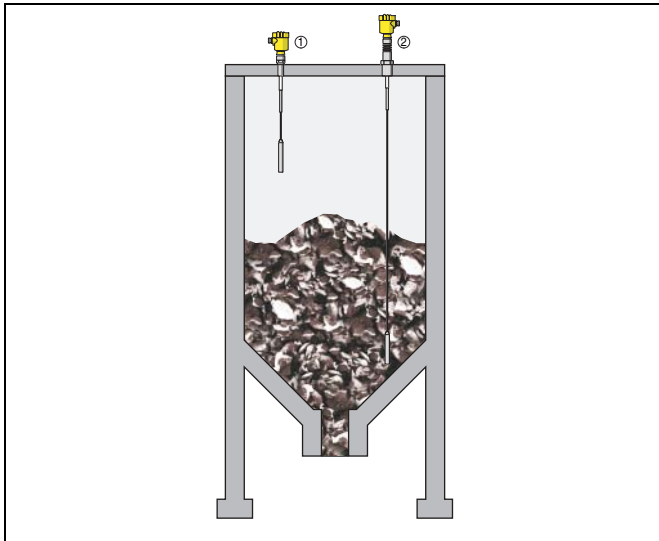


Fig. 3: Level switch in heavy solids

- 1 VEGACAP 65 level switch for full signalling/overflow protection
- 2 VEGACAP 65 level switch for empty signalling

Typical heavy solids are e.g. cement, sand, filler, gravel or flour.

Cable probes should be preferred over rod probes, especially for use in very heavy bulk materials. Cable probes can follow the movements of bulk material and thus have a considerably longer service life in abrasive and highly agitated bulk solids.

Ruggedness is very important for applications in heavy solids. The capacitive measuring principle lends itself well here. VEGACAP excels in such applications because of its robust mechanical construction and easy setup and commissioning.

Advantages:

- Very rugged construction
- Easy setup
- Shortenable probe
- Insensitive to buildup

Backup detection

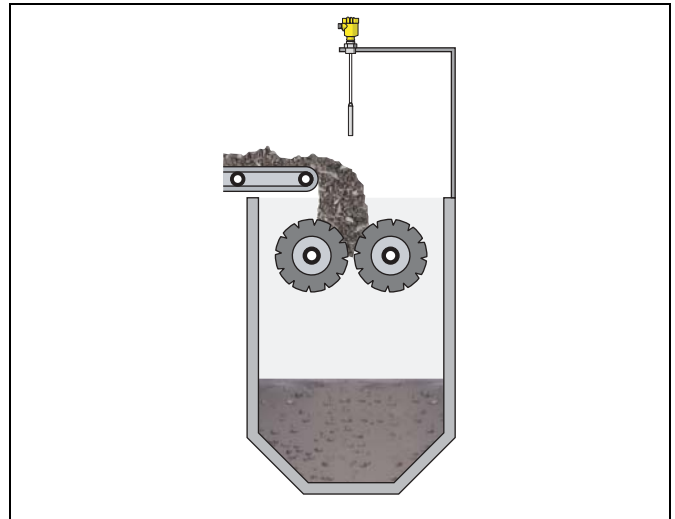


Fig. 4: Backup detection on conveyor belt/inlet funnel

- 1 VEGACAP 65 level switch for full signalling/overflow protection
- 2 VEGACAP 62 level switch for full signalling/overflow protection - laterally mounted

Bulk solids reach the inlet funnel or buffer vessel via belt or spiral conveyors. The VEGACAP capacitive probe signals and prevents a possible backup or an overflowing of the inlet funnel. Depending on the temperature and kind of bulk material, steam or dust may be generated in the buffer vessel. VEGACAP is not affected by this and continues to function reliably.

The flexible suspension cable avoids excessive mechanical loads caused by movements of the bulk material.

In solids with a low DK value, lateral installation is recommended - a horizontally mounted rod gets covered quickly over its entire length and thus provides much more reliable switching. A suitable guard plate should be mounted above the rod of the probe to protect it against damage from falling solids. If the rod is mounted slightly inclined to the bottom, buildup can slide off more easily. The bulk material should not be too coarse or heavy.

Advantages:

- Simple mounting
- Wide application range
- Very rugged construction
- Maintenance-free

2 Type overview

VEGACAP 62



VEGACAP 65



VEGACAP 66



Preferred application:	Solids, non-conductive liquids	Solids, non-conductive liquids	Solids, liquids
Version:	Rod - partly insulated	Cable - partly insulated	Cable - insulated
Insulation:	PTFE	PA	PTFE
Length:	0.2 ... 6 m (0.7 ... 20 ft)	0.4 ... 32 m (1.3 ... 105 ft)	0.4 ... 32 m (1.3 ... 105 ft)
Process fitting:	Thread from G $\frac{3}{4}$ A, flanges	Thread from ab G1 A, flanges	Thread from ab G $\frac{3}{4}$ A, flanges
Process temperature:	-50 ... +200 °C (-58 ... +392 °F)	-50 ... +200 °C (-58 ... +392 °F)	-50 ... +150 °C (-58 ... +302 °F)
Process pressure:	-1 ... 64 bar/-100 ... 6400 kPa (-14.5 ... 928 psi) (-14.5 ... 928 psi)	-1 ... 64 bar/-100 ... 6400 kPa (-14.5 ... 928 psi) (-14.5 ... 928 psi)	-1 ... 64 bar/-100 ... 6400 kPa (-14.5 ... 928 psi) (-14.5 ... 928 psi)

Housing



Plastic



Stainless steel



Aluminium

Electronics



Relay output



Transistor output



Contactless electronic switch



Two-wire output

Sensors



Probe

Approvals



Gas explosion protection



Dust explosion protection

3 Mounting information

Switching point

VEGACAP can be mounted in any position.

In case of horizontal installation, the instrument must be mounted in such a way that the probe is at the height of the requested switching point.

In case of vertical installation, the instrument must be mounted so that the probe is immersed approx. 50 ... 100 mm in the product when the desired switching point is reached.

Socket

In adhesive products, the probe should protrude into the vessel (horizontal mounting), to avoid buildup. In such cases, avoid sockets for flanges and threaded fittings.

Filling opening

Install the meas. probe in such a way that the probe does not protrude directly into the filling stream. Should such an installation location be necessary, mount a suitable baffle above or in front of the probe.

Horizontal installation

To achieve a very precise switching point, you can install VEGA-CAP horizontally. However, if the switching point can have a tolerance of a few centimeters, we recommend mounting VEGA-CAP approx. 20° inclined to the vessel bottom to avoid buildup.

Install rod probes in such a way that the probe projects freely into the vessel. When the instrument is mounted in a tube or socket, buildup can form which impairs the measurement. This applies mainly to adhesive products.

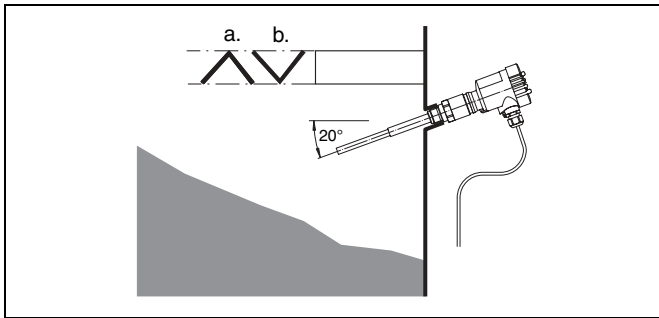


Fig. 5: Horizontal installation

Material cone

Material cones can form in silos for bulk solids, thereby altering the switching point. Please keep this in mind when installing the probe in the vessel. We recommend selecting an installation location where the probe detects an average value of the material cone.

The measuring probe must be mounted in a way that takes the arrangement of the filling and emptying apertures into account.

To compensate measurement errors in cylindrical vessels caused by the material cone, the probe must be mounted at a distance of $d/6$ from the vessel wall.

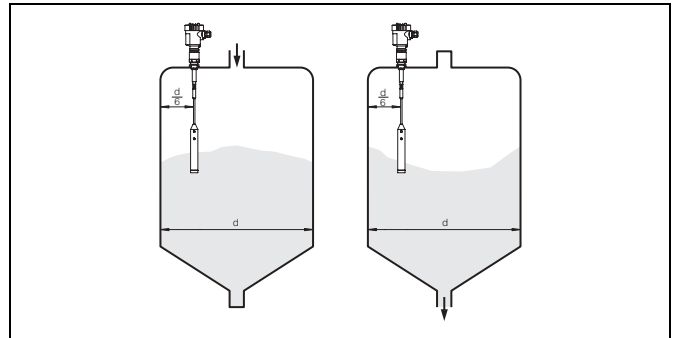


Fig. 6: Filling and emptying centered

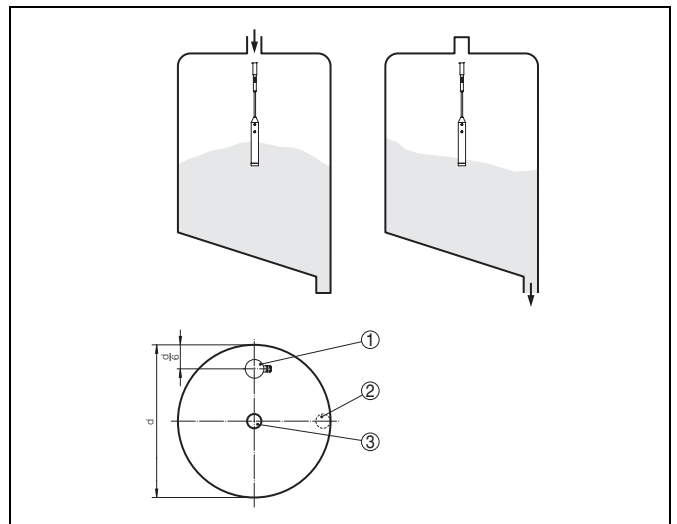


Fig. 7: Filling in the center, emptying laterally

- 1 VEGACAP
- 2 Emptying opening
- 3 Filling opening

Tensile load

If the cable version is used, make sure the max. tensile load of the suspension cable is not exceeded. Also keep the permissible roof load of your vessel in mind. This should be considered especially when using the instrument for very heavy solids and long meas. lengths. The max. permissible tensile load is stated in the "Technical data".

Inflowing material

If VEGACAP is mounted in the filling stream, unwanted switching signals may be generated. Mount VEGACAP at a location in the vessel where no disturbing influence from e.g. filling openings, agitators etc. can occur.

This applies particularly to instrument versions with a longer probe.

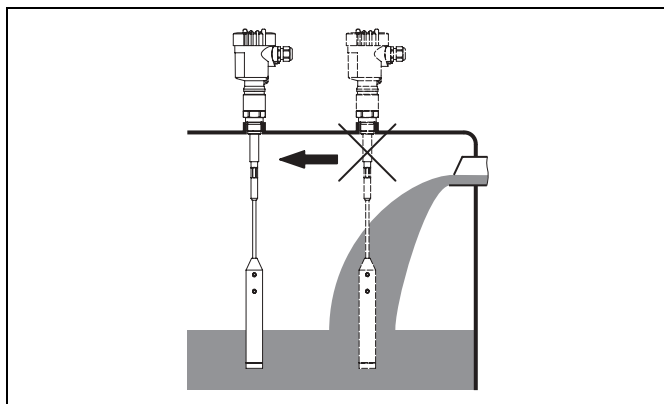


Fig. 8: Inflowing material

Pressure/Vacuum

The process fitting must be sealed if there is gauge or low pressure in the vessel. Check if the seal material is resistant against the measured product and the process temperature.

Insulating measures in metal vessels such as e.g. covering the thread with teflon tape can interrupt the necessary electrical connection to the vessel. Ground the probe on the vessel.

Length of the level detection probe

Keep in mind when ordering the instrument that when the switching point is reached the probe must be sufficiently immersed according to the desired filling level, and that the depth of immersion depends on the electrical properties (DK value) of the medium. An electrode for level detection in oil ($\epsilon_r \sim 2$) requires a considerably deeper immersion than one used in water ($\epsilon_r \sim 81$).

As a rule:

- non-conductive products >50 mm
- conductive products >30 mm

Lateral load

Make sure that the probe is not subjected to strong lateral forces. Mount the probe at a position in the vessel where no interfering influence, e.g. from agitators, filling opening etc. can occur. This applies particularly to very long rod and cable probes.

Product movement

Mount the probe in such a way that the probe cannot touch the vessel wall and that the screening tube cannot be bent or broken.

Shortening the probe

Partly insulated cable or rod probes can be shortened afterwards. Keep in mind that shortening the probe can change the inherent capacitance of the instrument, which can in turn change the switching point.

The probe is compensated to the respective probe length. Therefore you should state in your order if you intend to shorten the probe.

Tractive forces

If strong tractive forces arise, e.g. during filling or inflowing solids, high tensile loads can be caused. In such cases and for short measuring lengths, use a rod probe as the rod is generally more stable.

If a cable probe is necessary, because of the required length or installation position, the probe should not be stayed, as the cable should be allowed to follow product movements. But make sure the electrode cable never touches the vessel wall.

Metal vessel

Make sure that the mechanical connection of the probe to the vessel is electrically conductive to ensure sufficient grounding.

Use conductive seals such as e.g. copper, lead etc.

Insulating measures such as e.g. covering the thread with teflon tape can interrupt the necessary electrical connection. If this is necessary, use the ground terminal on the housing to connect the instrument with the vessel.

Non-conductive vessel

In non-conductive vessels, e.g. plastic tanks, the second pole of the capacitor must be provided separately, e.g. in the form of the braiding on the concrete silo. When using a standard probe, it is necessary to attach a suitable grounding surface. Attach a very broad grounding surface outside on the vessel wall, e.g. wire braiding laminated into the vessel wall or a metal foil glued to the outside of the vessel.

Connect the grounding surface to the ground terminal on the housing.

Conductivity of the product

In special cases, partly insulated probes can be used for level detection in conductive products. The electronics of the probe is short-circuit proof.

Influencing factors

In practice, the dielectric value is subject to certain fluctuations. The following factors can influence the capacitive measuring principle:

- Bulk density
- Concentration (mixing ratio of the product)
- Temperature
- Conductivity

The more constant the above mentioned factors, the better the conditions for capacitive measurement. Changes in the conditions are generally not critical in products with high dielectric values.

If a very precise switching point is required, or if the product changes or has a low dielectric value, we recommend lateral mounting - a horizontally mounted rod gets covered quickly over its entire length and has a much more reliable switching function.

You can either mount a standard measuring probe laterally or use an angled measuring probe.

Operating temperatures

If the housing is subject to high ambient temperatures, you have to either use a temperature adapter or disconnect the electronics from the probe and install it in a separate housing at a cooler place.

Make sure that the probe is not covered by an existing vessel insulation.

The temperature ranges of the probes are listed in the "*Technical data*".

Concrete vessel

To ensure sufficient grounding in concrete vessels, you should connect the ground terminal of the measuring probe to the steel reinforcement of the vessel.

Dielectric figure (DK value)

In products with low dielectric value and slight level changes you should try to increase the capacitance change. If the dielectric value is less than 1.5, special measures are necessary to ensure that the level is detected reliably. E.g. additional surfaces can be attached or a screening tube used with high sockets, etc.

For applications with high sockets and products with low dielectric value you can compensate the strong influence of the metal socket with a concentric tube.

Electrically conductive products react like products with very high dielectric value.

A detailed list with dielectric values is available on our homepage under "*Services - Downloads- Lists of measured products*".

Corrosive, abrasive products

Various isolating materials are available for very corrosive or abrasive products. If metal is not chemically resistant to the medium, use a plated flange.

Condensation

If condensation forms on the vessel top, the resulting liquid draining off can cause measurement errors (bridging) particularly with partly insulated probes.

For that reason, use a screening tube. The screening tube is permanently attached to the probe and must be specified in the order. The length of the screening tube depends on the amount of condensate and its flow behaviour.

4 Electrical connection

4.1 Preparing the connection

Note safety instructions

Always observe the following safety instructions:

- Connect only in the complete absence of line voltage

Take note of safety instructions for Ex applications



In hazardous areas you should take note of the appropriate regulations, conformity and type approval certificates of the sensors and power supply units.

Select power supply

Connect the power supply acc. to the following diagrams. Oscillator with relay output and contactless electronic switch are designed in protection class 1. To maintain this protection class, it is absolutely necessary that the ground conductor be connected to the internal ground terminal. Take note of the general installation regulations. As a rule, connect VEGACAP to vessel ground (PA), or in case of plastic vessels, to the next ground potential. On the side of the housing there is a ground terminal between the cable entries. This connection serves to drain off electrostatic charges. In Ex applications, the installation regulations for hazardous areas must be given priority.

The data for power supply are stated in the "Technical data".

Select connection cable

VEGACAP is connected with standard cable with round cross-section. An outer cable diameter of 5 ... 9 mm (0.2 ... 0.35 in) ensures the seal effect of the cable entry.

If cable with a different diameter or wire cross section is used, exchange the seal or use an appropriate cable connection.



In hazardous areas, only use approved cable connections for VEGACAP.

Select connection cable for Ex applications



Take note of the corresponding installation regulations for Ex applications.

4.2 Wiring plans

Relay output

We recommend connecting VEGACAP in such a way that the switching circuit is open when there is a level signal, line break or failure (safe condition).

The relays are always shown in non-operative condition.

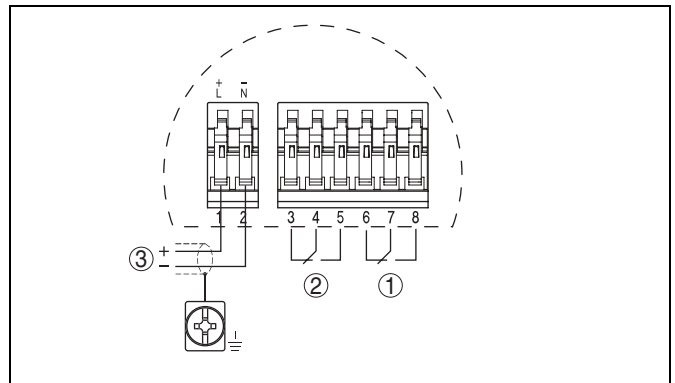


Fig. 9: Wiring plans, single chamber housing

- 1 Relay output
- 2 Relay output
- 3 Supply voltage

Transistor output

We recommend connecting VEGACAP in such a way that the switching circuit is open when there is a level signal, line break or failure (safe condition).

The instrument is used to control relays, contactors, magnet valves, warning lights, horns as well as PLC inputs.

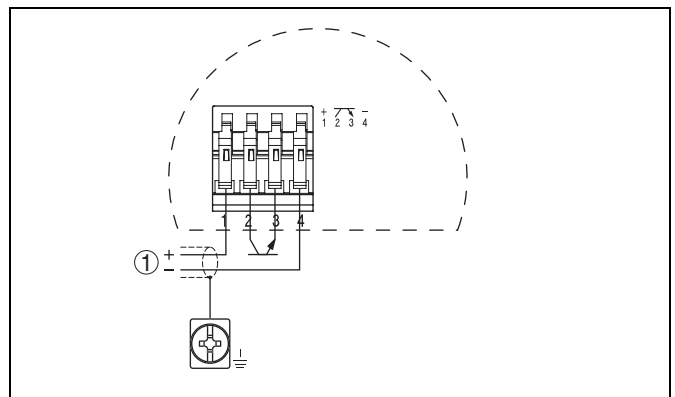


Fig. 10: Wiring plans, single chamber housing

- 1 Supply voltage

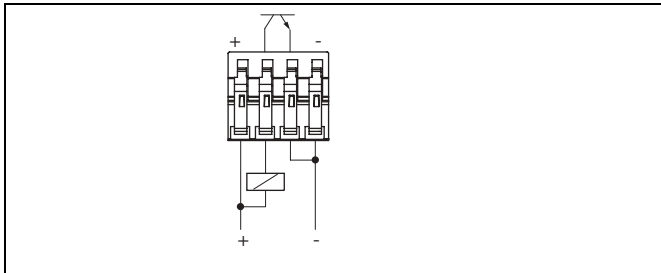


Fig. 11: NPN action

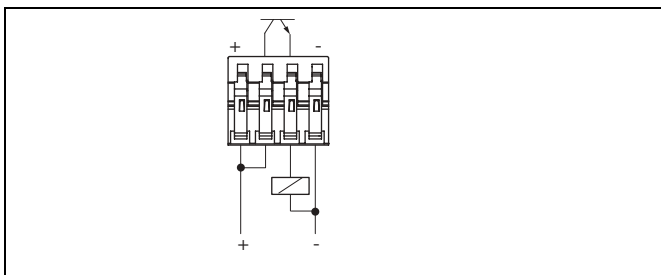


Fig. 12: PNP action

Contactless electronic switch

We recommend connecting VEGACAP in such a way that the switching circuit is open when there is a level signal, line break or failure (safe condition).

The contactless electronic switch is always shown in non-operative condition.

The instrument is used for direct control of relays, contactors, magnet valves, warning lights, horns etc. It must not be operated without an intermediately connected load, because the electronics would be destroyed if connected directly to the mains. It is not suitable for connection to low voltage PLC inputs.

Domestic current is temporarily lowered below 1 mA after switching off the load so that contactors, whose holding current is lower than the constant domestic current of the electronics, are reliably switched off.

When VEGACAP is used as part of an overflow protection system acc. to WHG, also note the regulations of the general type approval.

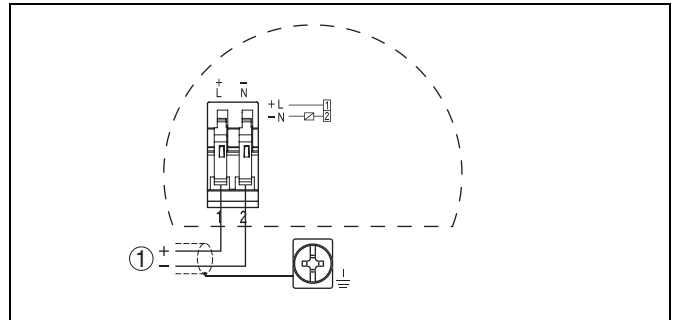


Fig. 13: Wiring plans, single chamber housing

1 Supply voltage

Two-wire output

We recommend connecting VEGACAP in such a way that the switching circuit is open when there is a level signal, line break or failure (safe condition).

For connection to a VEGATOR signal conditioning instrument dto. Ex. The sensor is powered by the connected VEGATOR signal conditioning instrument. Further information is available in the "Technical data" in the "Supplement", Ex-technical data are available in the supplied safety information manual.

The wiring example is applicable for all suitable signal conditioning instruments.

Take note of the operating instructions manual of the signal conditioning instrument. Suitable signal conditioning instruments are listed in the "Technical data".

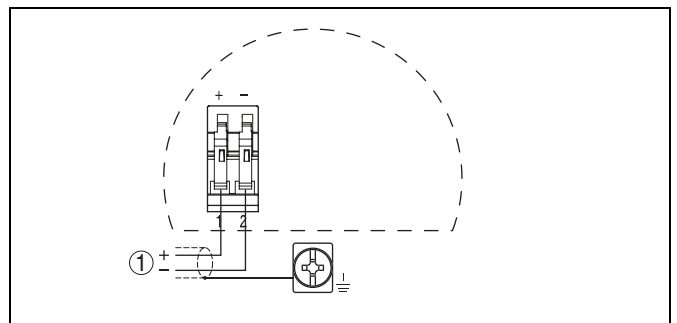


Fig. 14: Wiring plans, single chamber housing

1 Supply voltage

5 Adjustment

5.1 Adjustment, general

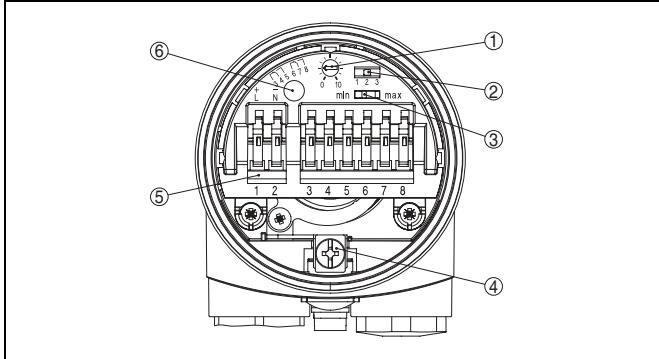


Fig. 15: Adjustment elements electronics module, e.g. relay output (CP60R)

- 1 Potentiometer for switching point adaptation (not with two-wire electronics)
- 2 Mode switch
- 3 DIL switch for mode adjustment (not with two-wire electronics)
- 4 Ground terminal
- 5 Terminals
- 6 Control lamp

Switching point adaptation (1)

By using the potentiometer you can adapt the switching point of VEGACAP to the medium.

With two-wire electronics the switching point is adjusted on the signal conditioning instrument. For that reason there is no potentiometer.

Mode switch (2)

Select the capacitance range of the probe with the mode switch.

With the potentiometer (1) and the mode switch (2) you can change the switching point of the probe or adapt the sensitivity of the probe to the electrical properties of the product and the conditions in the vessel.

This is required to enable the level switch to reliably detect products with very low or very high dielectric value reliably (DK = dielectric value).

Capacitance range

- Range 1: 0 ... 20 pF (sensitive)
- Range 2: 0 ... 85 pF
- Range 3: 0 ... 450 pF (insensitive)

Examples of dielectric values: air = 1, oil = 2, acetone = 20, water = 81 etc.

Turn the potentiometer (1) anticlockwise to make the probe more sensitive.

Mode adjustment (3)

With the mode adjustment (min./max.) you can change the switching condition of the output. You can set the required mode (max. - max. detection or overflow protection, min. - min. detection or dry run protection).

With two-wire electronics the mode is selected on the signal conditioning instrument. For that reason there is no mode switch.

LED display (6)

Diode for indication of the switching status (with plastic housing visible from outside)

6 Technical data

General data

Material 316L corresponds to 1.4404 or 1.4435

VEGACAP 62

Materials, wetted parts

– Process fitting - Thread	316L
– Process fitting - Flange	316L
– insulation (partly insulated)	PTFE
– Probe (rod PTFE partly insulated \varnothing 12 mm/ \varnothing 0.47 in)	316L

Materials, non-wetted parts

– Housing	Plastic PBT (Polyester), Alu die-casting powder-coated, 316L
– Seal between housing and housing cover	NBR (stainless steel housing), silicone (Alu/plastic housing)
– Ground terminal	316L

Weights

– with plastic housing	1150 g (40 oz)
– with Aluminium housing	1600 g (56 oz)
– with stainless steel housing	1950 g (69 oz)
– Rod weight \varnothing 12 mm (\varnothing 0.47 in)	900 g/m (10 oz/ft)
– Sensor length (L)	0.2 ... 6 m (0.7 ... 20 ft)
– Max. lateral load	10 Nm (7.4 lbf ft)
– Max. torque (process fitting thread)	100 Nm (73 lbf ft)

VEGACAP 65

Materials, wetted parts

– Process fitting - Thread	316L
– Process fitting - Flange	316L
– insulation (partly insulated)	PA, PTFE
– Probe (cable PTFE partly insulated \varnothing 6 mm/ \varnothing 0.24 in)	316L
– Probe (cable PA partly insulated \varnothing 8 mm/ \varnothing 0.32 in) ¹⁾	316L

Materials, non-wetted parts

– Housing	Plastic PBT (Polyester), Alu die-casting powder-coated, 316L
– Seal between housing and housing cover	NBR (stainless steel housing), silicone (Alu/plastic housing)
– Ground terminal	316L

Weights

– with plastic housing	1150 g (40 oz)
– with Aluminium housing	1600 g (56 oz)
– with stainless steel housing	1950 g (69 oz)
– Gravity weight	900 g (32 oz)
– Cable weight \varnothing 6 mm (\varnothing 0.24 in)	180 g/m (1.9 oz/ft)
– Cable weight \varnothing 8 mm (\varnothing 0.32 in)	220 g/m (2.1 oz/ft)
– Sensor length (L)	0.4 ... 32 m (1.3 ... 105 ft)
– Max. tensile load (cable)	
– PTFE partly insulated \varnothing 6 mm (\varnothing 0.24 in)	10 KN (2248 lbs)
– PA partly insulated \varnothing 8 mm (\varnothing 0.32 in)	10 KN (2248 lbs)
– Max. torque (process fitting thread)	100 Nm (73 lbf ft)

VEGACAP 66

Materials, wetted parts

– Process fitting - Thread	316L
– Process fitting - Flange	316L
– insulation (fully insulated)	PTFE
– Probe (cable PTFE fully insulated \varnothing 8 mm/ \varnothing 0.32 in)	316L

Materials, non-wetted parts

– Housing	Plastic PBT (Polyester), Alu die-casting powder-coated, 316L
– Seal between housing and housing cover	NBR (stainless steel housing), silicone (Alu/plastic housing)
– Ground terminal	316L

¹⁾ Cable connected electrically conductive with the gravity weight.

Weights	
– with plastic housing	1150 g (40 oz)
– with Aluminium housing	1600 g (56 oz)
– with stainless steel housing	1950 g (69 oz)
– Gravity weight	900 g (32 oz)
– Cable weight ø 8 mm (ø 0.32 in)	200 g/m (2.1 oz/ft)
Sensor length (L)	0.4 ... 32 m (1.3 ... 105 ft)
Max. tensile load (cable)	10 KN (2248 lbs)
Max. torque (process fitting thread)	100 Nm (73 lbf ft)

Output variable

Relay output

Output	relay output (DPDT), 2 floating spdts
Turn-on voltage	
– min.	10 mV
– max.	253 V AC, 253 V DC
Switching current	
– min.	10 µA
– max.	5 A AC, 1 A DC
Breaking capacity	
– max.	1250 VA, 50 W
– min.	50 mW
Contact material (relay contacts)	AgCdO and Au plated
Modes (adjustable)	min./max.
Integration time	
– when immersed	approx. 0.5 s
– when laid bare	approx. 0.5 s
– in case of failure	approx. 1 s

Transistor output

Output	floating transistor output, overload and permanently shortcircuit proof
Load current	max. 400 mA
Turn-on voltage	max. 55 V DC
Blocking current	<100 µA
Modes (adjustable)	min./max.
Integration time	
– when immersed	approx. 0.5 s
– when laid bare	approx. 0.5 s
– in case of failure	approx. 1 s

Contactless electronic switch

Output	Contactless electronic switch
Modes (adjustable)	min./max.
Integration time	
– when immersed	approx. 0.5 s
– when laid bare	approx. 0.5 s
– in case of failure	approx. 1 s

Two-wire output

Output	Two-wire output
Suitable signal conditioning instruments	VEGATOR 521, 527, 620, 621 and 622
Modes	adjustable via the signal conditioning instrument
Output signal	>4 ... <20 mA (not standardised)
Fault signal	<2.3 mA
Integration time	
– when immersed	approx. 0.5 s
– when laid bare	approx. 0.5 s
– in case of failure	approx. 1 s

Ambient conditions

Ambient temperature on the housing	-40 ... +80 °C (-40 ... +176 °F)
Storage and transport temperature	-40 ... +80 °C (-40 ... +176 °F)

29982-EN-060503

Process conditions

Parameter	Level detection of liquids and solids
Process pressure	-1 ... 64 bar/-100 ... 6400 kPa (-14.5 ... 928 psi)
- The max. permissible pressure and max. permissible temperature depend on the process fitting used.	
Process temperature	
- VEGACAP 62 - PTFE insulation	-50 ... +200 °C (-58 ... +392 °F), from 150 °C (302 °F) with temperature adapter
- VEGACAP 65 - PTFE insulation	-50 ... +200 °C (-58 ... +392 °F), from 150 °C (302 °F) with temperature adapter
- VEGACAP 65 - PA insulation	-50 ... +80 °C (-58 ... +176 °F)
- VEGACAP 66 - PTFE insulation	-50 ... +150 °C (-58 ... +302 °F)

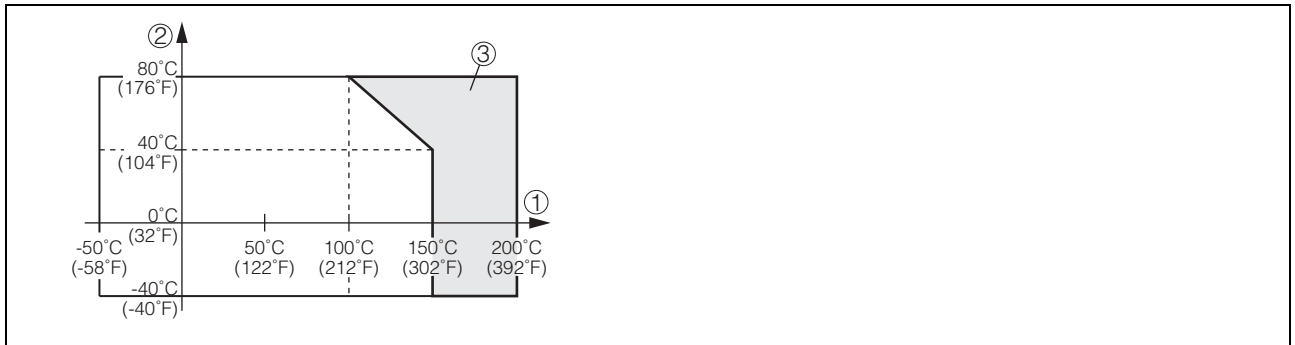


Fig. 16: Ambient temperature - Product temperature

- 1 Product temperature
- 2 Ambient temperature
- 3 Temperature range with temperature adapter

Dielectric figure	>1.5
-------------------	------

Electromechanical data

Cable entry/plug (dependent on the version)	
- Single chamber housing	<ul style="list-style-type: none"> • 1x cable entry M20x1.5 (cable-ø 5 ... 9 mm), 1x blind stopper M20x1.5; attached 1x cable entry M20x1.5 or: <ul style="list-style-type: none"> • 1x cable entry ½ NPT, 1x blind stopper ½ NPT, 1x cable entry ½ NPT or: <ul style="list-style-type: none"> • 1x plug M12x1, 1x blind stopper M20x1.5
Spring-loaded terminals	for wire cross-section up to 1.5 mm ²

Adjustment elements

Mode switch (not with two-wire electronics)	
- min.	min. detection or dry run protection
- max.	max. detection or overflow protection
Meas. range switch	
- range 1	0 ... 20 pF (sensitive)
- range 2	0 ... 85 pF
- range 3	0 ... 450 pF (insensitive)
- Fault signal	<2.3 mA
Switching point adjustment	Potentiometer (not with two-wire electronics)

Supply voltage

Relay output (R)	
Supply voltage	20 ... 253 V AC, 50/60 Hz, 20 ... 72 V DC (at U >60 V DC, the ambient temperature can be max. 50 °C/122 °F)
Power consumption of the lighting	1 ... 8 VA (AC), approx. 1 W (DC)

Transistor output (T)

Supply voltage 10 ... 55 V DC
 Power consumption of the lighting max. 0.5 W

Contactless electronic switch (C)

Supply voltage 20 ... 253 V AC, 50/60 Hz, 20 ... 253 V DC
 Domestic current requirement approx. 3 mA (via load circuit)
 Load current
 – min. 10 mA
 – max. 400 mA (at I > 300 mA the ambient temperature can be max. 60 °C) max. 4 A up to 40 ms

Two-wire output (Z)

Supply voltage 10 ... 36 V DC (via the signal conditioning instrument)

Electrical protective measures

Electronics versions - relay output, contactless electronic switch

Protection IP 66/IP 67
 Overvoltage category III
 Protection class I

Electronics versions - transistor output, two-wire output

Protection IP 66/IP 67
 Overvoltage category III
 Protection class II

Approvals²⁾

Electronics versions - relay, transistor output, contactless electronic switch

Overfill protection acc. to WHG
 ATEX
 – ATEX II 1/2D 2D IP6X T
 Ship approvals

Electronics version - two-wire output

Overfill protection acc. to WHG
 ATEX
 – ATEX II 1G, 1/2G, 2G EEx ia IIC T6
 – ATEX II 1/2D 2D IP6X T
 IEC
 – IEC Ex ia IIC T6
 Ship approvals

CE conformity

EMVG (89/336/EWG), Emission: EN 61326: 2004 (class B),
 Susceptibility: EN 61326: 2004 (Supplement A)
 LVD (73/23/EWG), EN 61010-1: 2001

²⁾ Deviating data in Ex applications: see separate safety instructions.

7 Dimensions

Housing

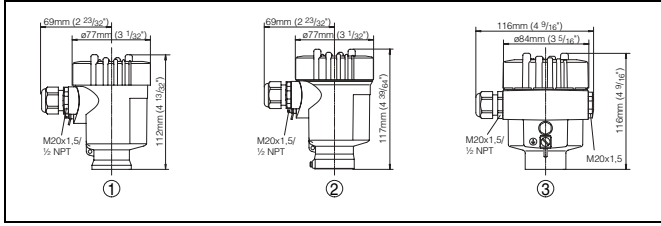


Fig. 17: Housing versions

- 1 Plastic housing
- 2 Stainless steel housing
- 3 Aluminium housing

VEGACAP 62

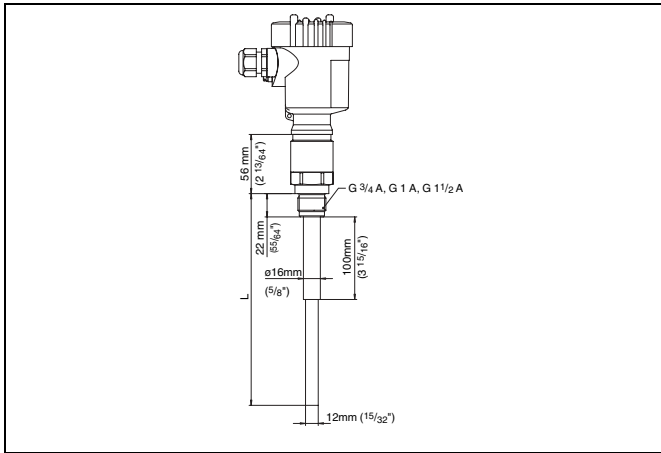


Fig. 18: VEGACAP 62 - threaded version

VEGACAP 65

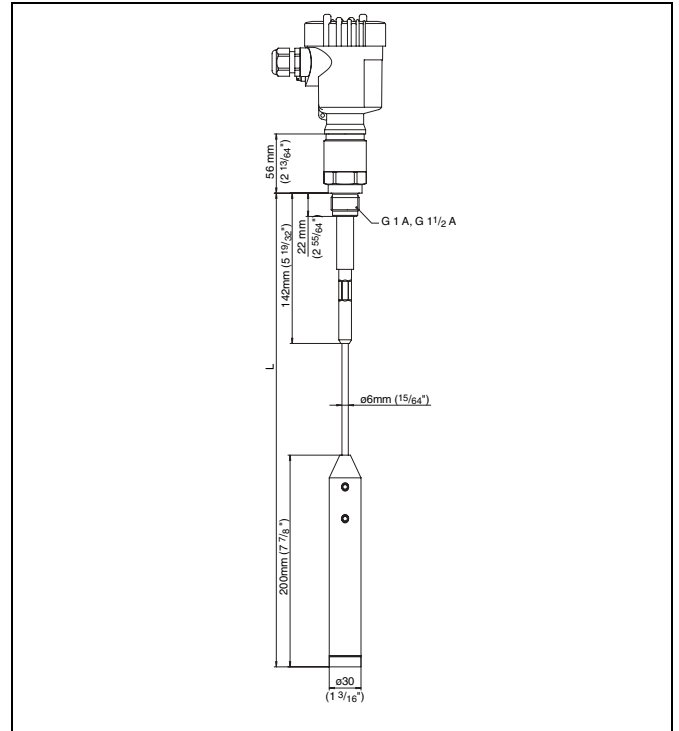


Fig. 19: VEGACAP 65 - threaded version

VEGACAP 66

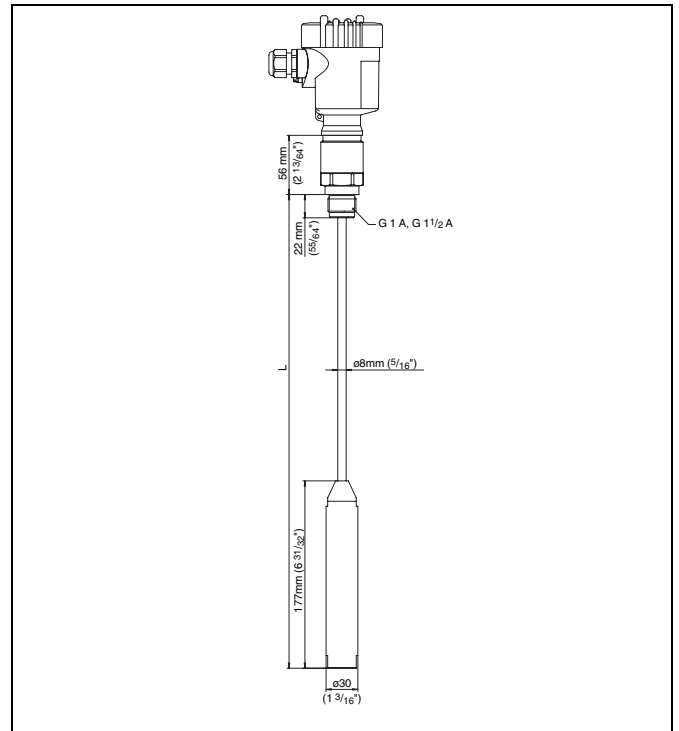


Fig. 20: VEGACAP 66 - threaded version



VEGA

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany
Phone +49 7836 50-0
Fax +49 7836 50-201
E-Mail: info@de.vega.com
www.vega.com



You can find at www.vega.com downloads of the following

- operating instructions manuals
- menu schematics
- software
- certificates
- approvals

and much, much more